M24LHD 2.4" - FM

User manual

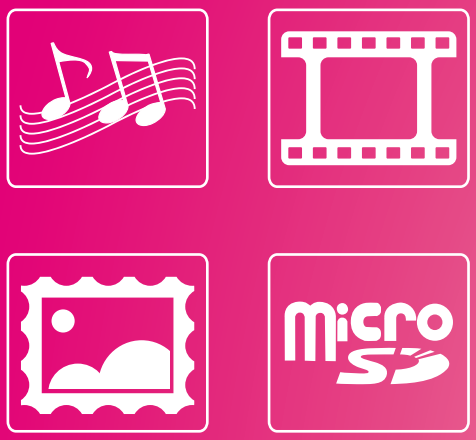

www.memup.com

memup™

Notice

- Download latest user manual from www.memup.com if there is a difference in the instructions given in this manual.
- Do not disconnect the player when it is being formatted or uploading /downloading data.
- Do not subject the device to severe impact or drop it from high position.
- Do not use the player in extreme hot or cold, dusty or damp field. Do not expose it to direct sunshine.
- Back up the data frequently in case of accident data loss.
- Avoid using the player in strong magnetic field.
- Keep the device away from water or other liquids. In the event that water or other liquids enter the device, power off the product immediately, and clean the device.
- Do not use chemical solution to clean the device in order to avoid corrosion. Clean it with a dry cloth.
- Do not attempt to disassemble, repair or modify the product. This will invalidate guarantee.

Introduction

The high integration reduces the device weight and the dimensions and the use is comfortable. The big display with TFT technology offers clear and sharp information and the USB 2.0 High Speed interface make easier the data transfer operation from/to the computer. The M24LHD MP3/MP4 Player has built-in a Lithium battery rechargeable by computer USB port. By the microphone inside it is possible to record voice messages and play them directly with the device or by computer.
Before using this product, please read this manual and retain the instruction for future reference.

Description

Here below you will find a product description

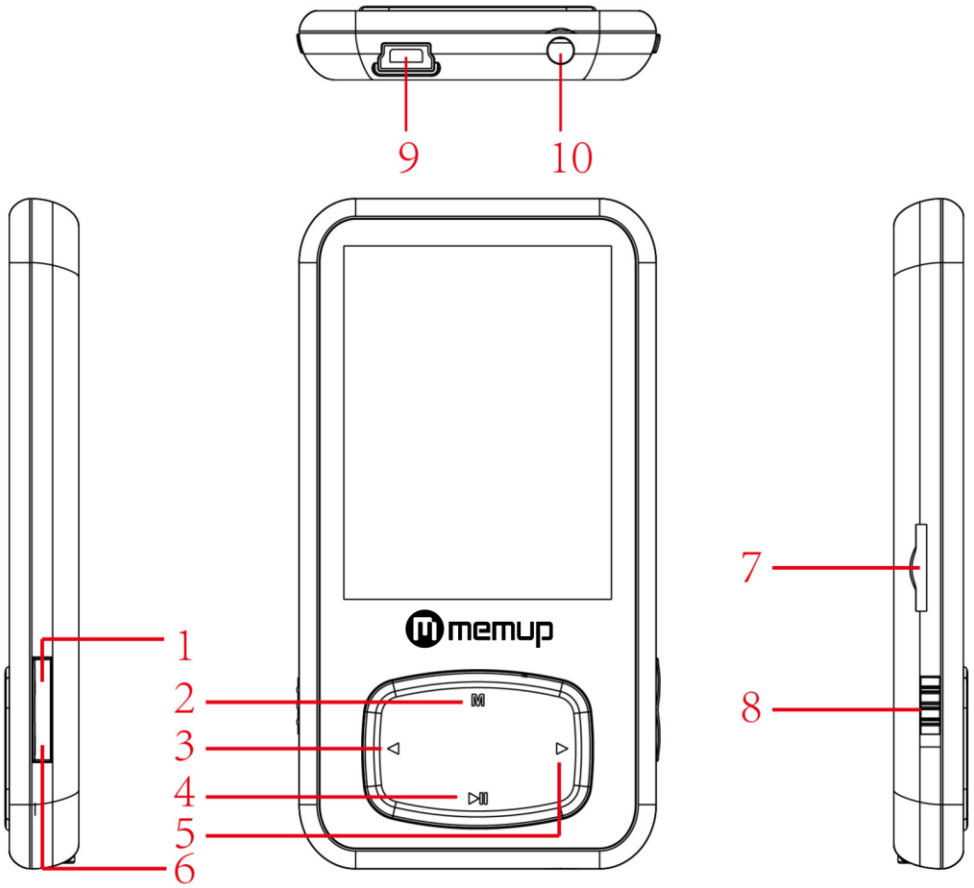

1. **Volume +**
2. **Menu**
3. **Previous / Backward**
4. **Play [⏵] / Pause [⏸]**
5. **Next / Forward**
6. **Volume -**
7. **MICRO SD card slot**
8. **Power ON /OFF**
9. **USB connector**
10. **Earphone connector**

1. Display

Here below you will find a display description

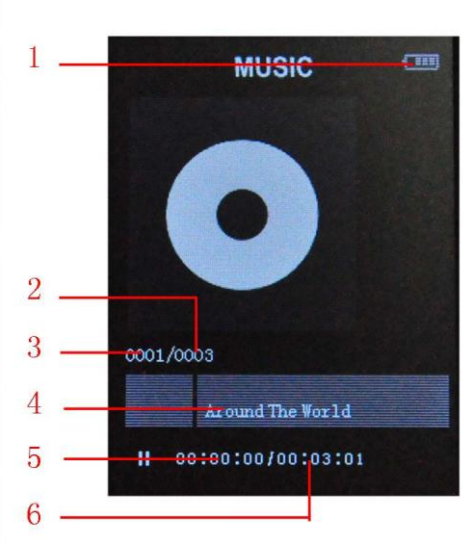

1. **Battery Life**
2. **Total Number of songs**
3. **Current song**
4. **File name**
5. **Elapsed Time**
6. **Total time**

2. Use

Power ON/OFF

The MP4 player has built-in a rechargeable battery. At the first use we suggest to recharge the battery for a long period (around 8 hours). To recharge the battery please connect the MP4 player to USB computer port.
Powering On: Turn on On/Off button to On position
Powering Off: Hold the [▶] / Pause [⏸] key until the power-off animation begins. Then, turn the On/Off button to Off position.

Recharge the Player

The player can be recharged by the provided USB cable by connecting to the PC. During charging, an icon on the right will show. You should first turn on your PC, and then connect the player to the PC through the USB cable. The player should be fully charged in 3 to 4 hours.

3. Main Menu

After powering ON the Player, you can see the main menu with 9 submenus, which allow you to select different functions and options.

By using the [◀] or [▶] buttons, you can select the desire option, and then press Play button to confirm the selection.

To access at the main menu while you are inside any of these submenus, press and hold MENU [M] switch for a few seconds. (Short pressing the MENU [M] switch usually opens the submenu option of each submenu)

Music

Recordings

Video

FMradio

Folder view

Alarm

Ebook

Photo

Settings

The available options are:

Music: Select this option to play song.

Video: Select this option to play video.

FM Radio: Select this option to listen radio programs

Picture: Select this option to browse and see photos.

E-Book: Select this option to read text.

Record: Select this option to record voice messages by the microphone inside.

Explorer: Select this option to explore the folders or your player.

Alarm: Select this option to set Stopwatch and upgrade the firmware.

System: Select this option to access at system setup.

4. Music Mode

The music player option allows playing songs. To activate this option please follow here below instruction:

1. Power ON the Player, the screen will display the main menu
2. By using [◂] or [▸] buttons, select MUSIC option then press [▸ II] button.
3. Press [▸ II] button to start to play the first song available.

Key Function at Music Mode
During the song play it is possible to activate the following controls.

[▶ II]:	Press the [▸ II] to start to play a song. Press the play button again to pause the song. To restart to play the song press play button again. Hold the play button for longer time will eventually turn off the player
REW & FFWD [◀◀ ▶▶]:	Press [◂] or [▸] to select the previous or the next song. Press and Hold the [◂] or [▸] buttons to rewind or fast forward the song.
Volume (VOL+ and VOL-):	Press [VOL+] button to increase the volume and press [VOL-] button to decrease the volume.

Music Submenu

By long pressing the MENU [M] button, you can find the following music submenus. Press [◂] or [▸] to choose, and then press [▸ II] key to confirm each submenus. Use the same technique to navigate inside each of the submenus.

Submenu Options
Play mode: **- Play music from …** (…all songs, …this artist, …this album, …this genre) **- Repeat** (Repeat off, repeat one, repeat all, Viewplaying, Shuffle (on/Off) **- Repeat settings (repeat mode, replay times** (1 to 10 times) **- Replay interval** (1 to 10)
Sound setting : **- Equalizer** (Off, Rock, Funk, Hip Hop, Jazz Classical, Techno, Custom (to set) **- Variable Speed playback :** set the playing speed of the Song from -8 to +8 **- Volume limit :** up to 30
Add to PlayList : Select the Playlist on the go 1, 2 or 3
Remove from PlayList : Select the Playlist on the go 1, 2 or 3
Sleep timer : Off or Set sleep timer from 1 to 99 minutes
Delete : to delete the song
Bookmarks : Add bookmark, Go to bookmark, Delete bookmark

Lyric Display
The Player supports Lyrics Display, in which the lyrics would be shown synchronizing with the actually lyrics of the song. The file format should be ".lrc", and the file name should be exactly the same with the song's file name and place within the same folder with the song. To activate this option, please follow here below instruction:

1. While playing song, press and hold MENU [M] to activate lyrics display
2. Short press MENU [M] button again to de-activate the lyrics display and return to music play menu.

5. Video Mode

Caution: The Movie Player only plays AMV files, you need conversion from other file format in order to watch the movie you like.

Supported formats to be converted in AMV format with AMV video converter:

- AVI format (.avi)
- Windows Media format (.asf, .wmv & .wma)
- MPEG 1 format (.mpg, mpeg &.dat)
- Real player format (.rm)
- Quicktime format (.mov)
- MPEG 2 format (.vob)

NOTE: to convert some formats it is necessary to have installed the related codec (for example Quicktime for ".mov" files or DivX Codec for some ".avi" files)

The Video allows playing movies in AMV Format. To activate this option please follow here below instruction:

1. Power ON the Player, the screen will display the main menu.
2. By using [⏮] or [⏭] buttons, select Video option then press [⏵⏸] button.
3. Press [⏵⏸] button to start to play the first movie available.

Key Function at Video Mode

During the song play it is possible to activate the following controls.

[► ⏸]:	Press the [⏵⏸] to start to play a movie. Press the play button again to make a pause. To restart to play the movie press play button again. Hold the play button for longer time will eventually turn off the player
REW & FFWD [⏪ ⏩]	Press [⏮] or [⏭] to select the previous or the next movie. Press and Hold the [⏮] or [⏭] buttons to rewind or fast forward the movie.
Volume (VOL+ and VOL-):	Press [VOL+] button to increase the volume and press [VOL-] button to decrease the volume.

Video Submenu

By short pressing the MENU [M] button, you can find the following Video submenus. Press [⏮] or [⏭] to choose, and then press [⏵⏸] key to confirm each submenus. Use the same technique to navigate inside each of the submenus.

Submenu Options
Brightness : to set the brightness
Repeat : Repeat off, repeat 1, repeat all
Delete Video
Create playlist

6. Radio FM

When the FM Radio mode is activated it is possible to hear radio programs. This option allows us to enjoy FM radio programs.
To use it, please follow here below instruction:

1. Power ON the Player, Then press the play [⏵⏸] button, the screen will display the main menu
2. By using [◀] or [▶] buttons, select Radio FM option then press [⏵⏸] button to confirm.

Here below you will find the FM radio option list.

Channel list:	Select this option to see the list of channel you selected. Chose your channel by using [◀] or [▶] buttons and press [⏵⏸] key to listen to it.
Manual tune:	Select this option to search manually for radio channels.
Auto tune:	Select this option to start auto-searching for radio channels.
FM Recording:	Select this option to play FM recording files

Radio Submenu

While you are listening a channel, by long pressing the MENU [M] button, you can find the following FM submenus. Press [▶] or [◀] to choose, and then press play [⏵⏸] key to confirm each submenus. Use the same technique to navigate inside each of the submenus.

Here below you will find the FM radio option list.

Start FM radio recording:	Select this option to FM Record
Save to preset:	Select this option to save radio channels
Clear Preset:	Select this option to delete channel
Auto tune:	Select this option to start auto-searching for radio channels.
Tuner Region:	Select this option to choose the tuner region including Common band, JAPAN and EUROPE
FM Recording:	Select this option to play FM recording files

Automatic Search
To scan automatically all the available channels, please follow here below instruction:

1. When the FM Mode is activated, long press MENU [M] button to select AUTO option.
2. Press play [⏵⏸] button to start the automatic search. The Player will store maximum 20 radio programs available.
3. It is muted while searching.

7. Photo viewer

The Photo option allows browsing picture file. To activate this option please follow here below instruction:

1. Power ON the Player, the screen will display the main menu.
2. By using the [⏮] or [⏭] buttons select Photo, and then press [⏵⏸] button to confirm
3. Use [⏮] or [⏭] buttons to choose the file
4. Press [⏵⏸] button to start browsing the file

Photo Submenu

By short pressing the MENU [M] button, you can find the following music submenus. Press [⏮] or [⏭] to choose, and then press [⏵⏸] key to confirm each submenus. Use the same technique to navigate inside each of the submenus.

Status	Submenu Options
In play mode	**Slideshow settings:** Select this option to set : - Time per slide from 2 to 30 seconds - Repeat : On/Off - Shuffle : On/Off
	Delete picture: Select this option to delete the picture.
	Medialib update: Select this option update the Media library.

8. E-Book

The Ebook option allows reading text file. To activate this option please follow here below instruction:
1: Power ON the Player, the screen will display the main menu.
2: By using the [⏮] or [⏭] buttons select E-book, and then press [⏵⏸] button to confirm
3: Use [⏮] or [⏭] buttons to choose the file
4: Press [⏵⏸] button to start reading the file

E-Book Submenu

By short pressing the MENU [M] button, you can find the following music submenus. Press [⏮] or [⏭] to choose, and then press [⏵⏸] key to confirm each submenus. Use the same technique to navigate inside each of the submenus.

Status	Submenu Options
In play mode	**Play settings:** Select this option to set time per page from 2 to 30 seconds
	Delete ebook: Select this option to delete the text file.
	Select bookmark : Select you bookmark within the list of bookmark added
	Delete Bookmark : Select this option to delete the text bookmark.
	Add Bookmark : Select this option to add a new text bookmark.
	Page select : Select this option to go to the page of your choice.

9. Record: Voice messages recorder

This option allows to record voice messages by using the microphone inside. To record voice message, please follow here below instruction:

1. Power ON the Player, the screen will display the main menu.
2. By using [⏮] or [⏭] buttons, select Record option then press [⏵⏸] button.
3. Select Start voice recording and Press [⏵⏸] button to start, pause and stop recording. Then press MENU [M] button to save the recording in your record list
4. You can listen to your recording file under the Record list submenu.

Start voice recording: Select this option to record voice messages and save them in records list
Record list: Select this option to see the list of your recordings and play them
Record format: Select this option to set the recording quality MP3 or WAV formats
Record settings: Select this option to set record bit rate: 512, 768, 1024 or 1536 kbps.

10. Browser : folder view

Under the Folder View menu, you can locate all kinds of files including music, videos, recordings, photos, and text files. And you can enjoy these files directly from here. To use it, please follow here below instruction:

1. Power ON the MP3 Player, Then press the play [⏵⏸] button ,The screen will display the main menu
2. By using [⏴] or [⏵] buttons, select BROWSER option then press play [⏵⏸] button to confirm.
3. You will enter the folder menu, in which you can see all kinds of files.
4. You can also choose files from the flash memory card, press play [⏵⏸] button to confirm and enjoy these files.
5. Press [M] to return to the folder menu.

11. Settings: System Setup

The Setting option allows to access to MP4 player setup system. To access at system setup please follow here below instruction:

1. Power ON the Player, button, the screen will display the main menu.
2. By using the [⏮] or [⏭] select Setting option then press [⏵⏸] button to enter the Setting menu.
3. By using the [⏮] or [⏭] select the system setup parameter and press [⏵⏸] button.

The parameters available in the setup system are:

Sleep timer This option allows setting of the sleep time.

Sound settings This option allows setting of the Volume limit and Key tone

Display: This option allows setting of the display parameters: Brightness and Backlight timer.

Language This option can choose different languages

Information This option can check : Player information and Disk space

Factory settings: This option to restore factory settings

12. Alarm

To activate this option please follow here below instruction:

1. Power ON the MP3 Player, Then press the play [⏵⏸] button. The screen will display the main menu.
2. By using the [◀] or [▶] buttons select Tools, and then press play [⏵⏸] button to enter the Tools MENU.
3. Use [◀] or [▶] buttons to choose the Alarm.
4. Press play [⏵⏸] button to enter.

Here below you will find the tools list.

Stopwatch: Select this option to use stopwatch function

Firmware Upgrade: Select this option to upgrade the player

LIMITATION OF LIABILITY AND DAMAGES.

IN NO EVENT WILL MANUFACTURER AND MANUFACTURER'S RESELLERS (COLLECTIVELY REFERRED TO AS "THE SELLERS") BE LIABLE FOR DAMAGES OR LOSS, INCLUDING BUT NOT LIMITED TO DIRECT, INDIRECT, SPECIAL WILLFUL, PUNITIVE, INCIDENTAL, EXEMPLARY, OR CONSEQUENTIAL, DAMAGES, DAMAGES FOR LOSS OF BUSINESS PROFITS, OR DAMAGES FOR LOSS OF BUSINESS OF ANY CUSTOMER OR ANY THIRD PARTY ARISING OUT OF THE USE OR THE INABILITY TO USE THE PRODUCT OR THE SOFTWARES, INCLUDING BUT NOT LIMITED TO THOSE RESULTING FROM DEFECTS IN THE PRODUCT OR SOFTWARE OR DOCUMENTATION, OR LOSS OR INACCURACY OF DATA OF ANY KIND, WHETHER BASED ON CONTRACT, TORT OR ANY OTHER LEGAL THEORY, EVEN IF THE PARTIES HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. BECAUSE SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABLITY FOR DAMAGES, THE ABOVE LIMITATION MAY NOT APPLY TO THE PARTIES. IN NO EVENT WILL THE SELLERS' TOTAL CUMULATIVE LIABLIITY OF EACH AND EVERY KIND IN RELATION TO THE PRODUCT OR ITS SOFTWRE EXCEED THE AMOUNT PAID BY CUSTOMER FOR THE PRODUCT.